
# - Thank you for buying the Avenue Dining Bench 150cm

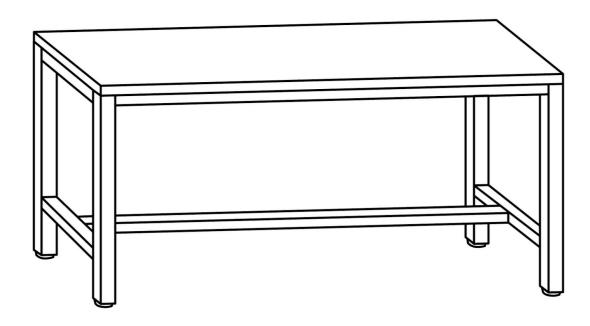

### Before you start:

### **Unpack carefully**

- Take care when unpacking and assembling your bench as damaged or scratched items cannot be returned
- Do not use sharp objects
- Be careful not to dispose of the enclosed assembly kit
- Please retain all packaging until you are 100% happy with your bench


### Before and during assembly


- Make sure all items are accounted for and clearly laid out before starting
- Make sure you have enough space to assemble the bench safely
- Place all parts on a soft and flat surface to avoid damage
- Put all bolts in before fully tightening
- Do not use power tools or overtighten any fittings as this can cause damage
- Carefully trim off any loose threads on upholstered benches

### Caution

— Keep small parts, plastic bags and film away from children


## - In the box

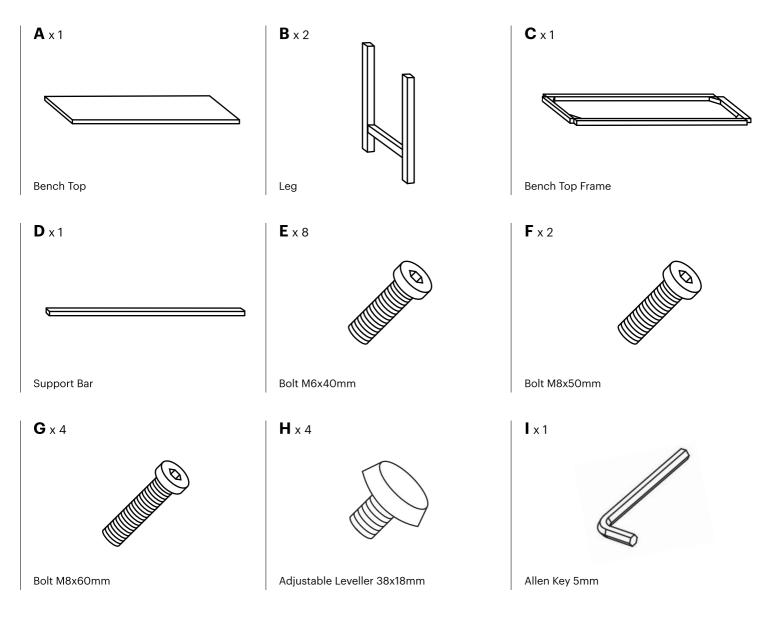

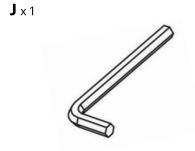


Allen Key 6mm


**1** Attach the legs to the support bar as shown.

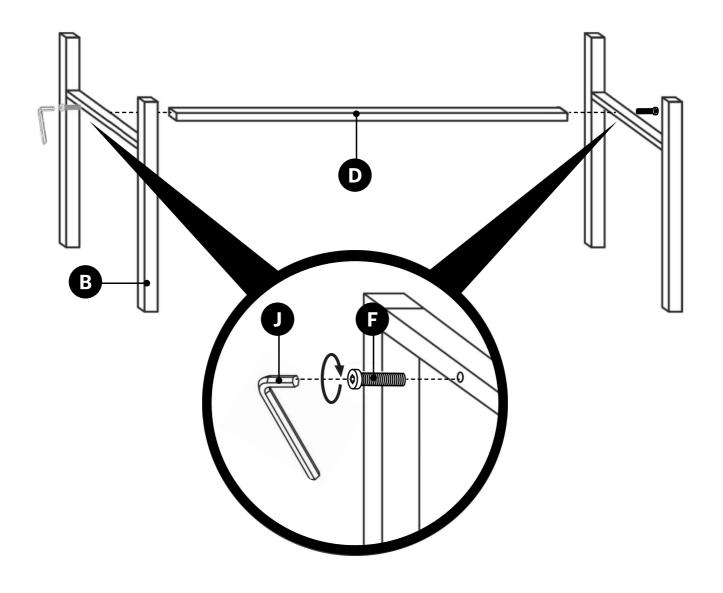


**2** Attach the bench top frame as shown.

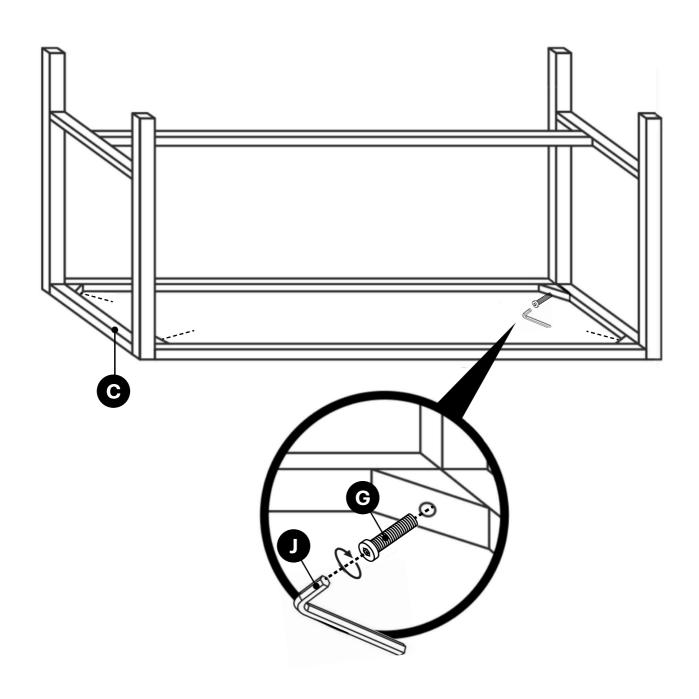


**3** Place the bench top on a soft, flat surface. Attach the frame to the bench top as shown.

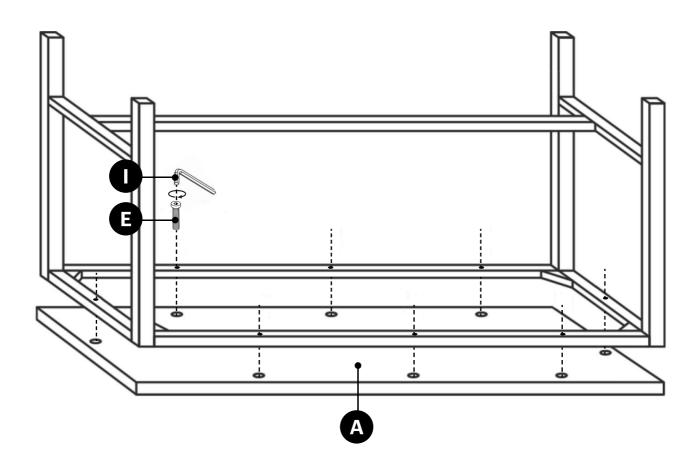

**4** Attach the adjustable levellers as shown.

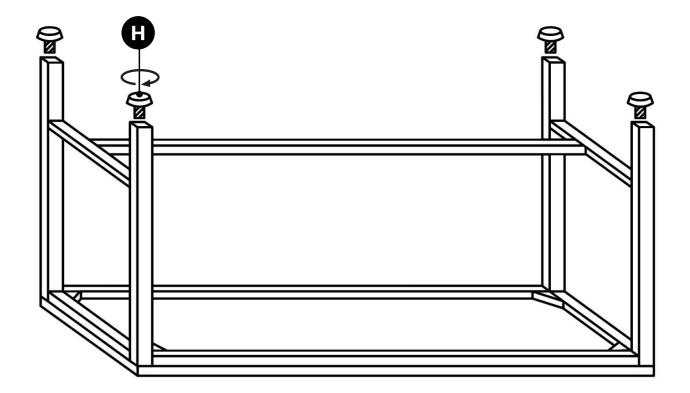

5

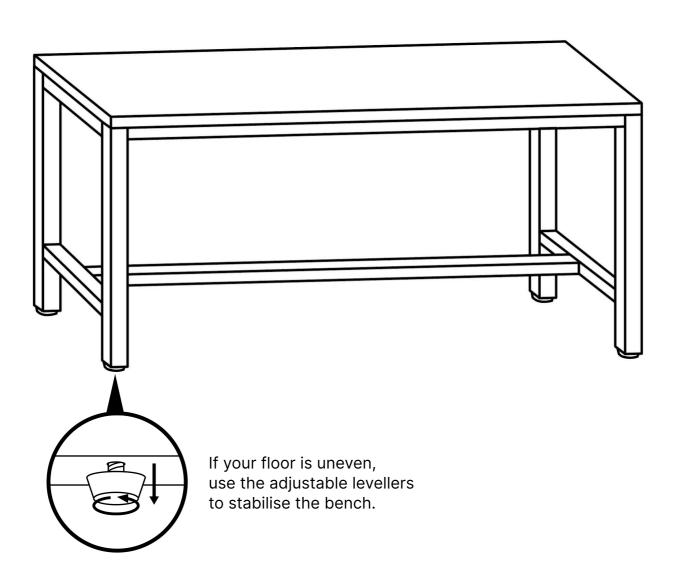

## - Important information - please read before use



#### Upholstery and appearance

- Every effort has been made to ensure each piece of furniture matches
- The materials used may have variation in colour and grain this is a natural characteristic of the material and not a fault
- If the upholstery is creased on delivery, allow it to settle at room temperature
- Creasing in seats and back cushions may appear over time this is a natural characteristic of the material and not a fault
- Upholstery can have a pile in the weave and look different from various angles and lighting this is a natural characteristic of the material and not a fault

### Cleaning your furniture

- Do not use household cleaning products, bleaches, solvent based cleaners, detergents, corrosives, scourers or abrasives, which can damage surfaces and upholstery
- Dust and vacuum your furniture on a weekly basis with the appropriate upholstery attachment
- Use a clean, soft, lint-free cloth slightly dampened with water to remove dirt or body oils
- For tougher stains, use a soft cloth with a little non-alkaline, non-detergent soap

### Caring for your furniture

- Remove spills immediately do not rub stains and spills, blot them first
- Avoid placing damp clothing, wet towels or printed newspapers directly on the upholstery
- Avoid placing hot cups or plates directly onto the furniture as this can damage the upholstery
- Avoid strong sunlight (such as through patio doors and windows), as this can cause discolouration, fading or surface degradation over time
- Avoid strong sunlight on chrome finishes as this can magnify the heat of the sun
- Avoid sitting on the edge of the cushions as this can cause distortion or permanent wear
- Do not sit on the arms
- Avoid sharp objects such as studs, buckles, jewellery, heels, toys or a pet's claws on the upholstery as this can cause damage
- Greasy and oily hair products can damage upholstery
- Light-coloured upholstery can be at risk of discolouration due to dye transfer from dark or strong-coloured clothing, cushions and throws

#### To avoid structural damage

- Do not stand or jump on the bench
- Do not rock or lean back on the bench
- Do not drag the bench when moving, instead lift and place carefully
- Do not use the bench unless all the bolts and screws are fully tightened
- Regularly tighten the bolts to avoid damage and maintain stability and strength

This bench is for indoor, residential use only.

For more information and support, visit help.furniturechoice.co.uk