



Customer Service help.furniturechoice.co.uk

# - Thank you for buying the Chatsworth Extending Dining Table



## Before you start:

### **Unpack carefully**

- Take care when unpacking and assembling your table as damaged or scratched items cannot be returned
- Do not use sharp objects
- Be careful not to dispose of the enclosed assembly kit
- Please retain all packaging until you are 100% happy with your table

## Before and during assembly

- This table requires 2 people to assemble
- Make sure all items are accounted for and clearly laid out before starting
- Make sure you have enough space to assemble the table safely
- Assemble the table where it will be placed to avoid moving unnecessarily
- Place all parts on a soft and flat surface to avoid damage
- Carefully remove any transit bolts before assembly
- Put all bolts in before fully tightening
- Do not use power tools or overtighten any fittings as this can cause damage

### Caution

- Keep small parts, plastic bags and film away from children





■ 茶記 Customer Service help.furniturechoice.co.uk

## - In the box


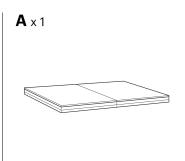


Table Top



**F** x 8

**B** x 2

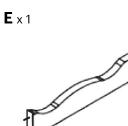

Bolt M6x40mm

**J** x 16

Hex Nut M8

Mounting Plate



Pedestal





Adjustable Leveller M6x16mm

Screw M4x30mm

**K** x 6

**D** x 6

 


Table Leg

**H** x 16



Spring Washer 13mm

**L** x 1



Spanner 13mm

**x** 16

Centre Rail



Flat Washer 22mm

**M** x 1




Allen Key 4mm






Customer Service help.furniturechoice.co.uk

1 Attach the table legs to the pedestals. Secure with the washers and nuts as shown, then tighten with the spanner.

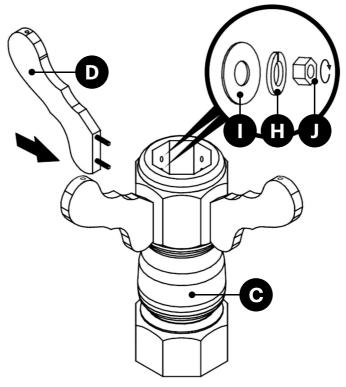

**2** Attach the adjustable levellers as shown.

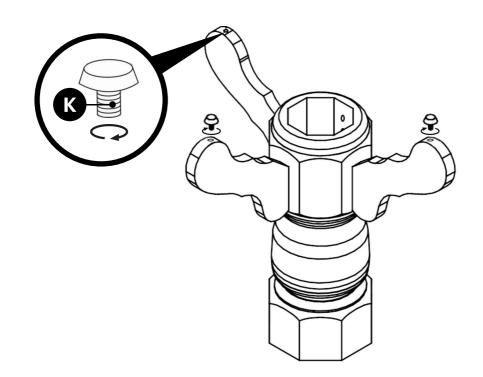







Customer Service
help.furniturechoice.co.uk

**3** Attach the mounting plates to the pedestals. Insert the bolts as shown, then tighten with the Allen key.

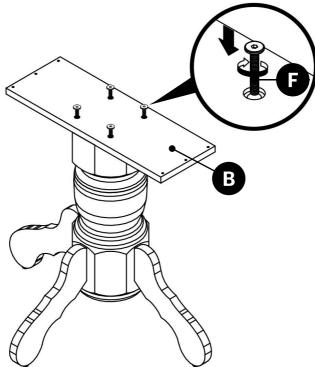

**4** Join the pedestals to the centre rail. Secure with the washers and nuts as shown, then tighten with the spanner.

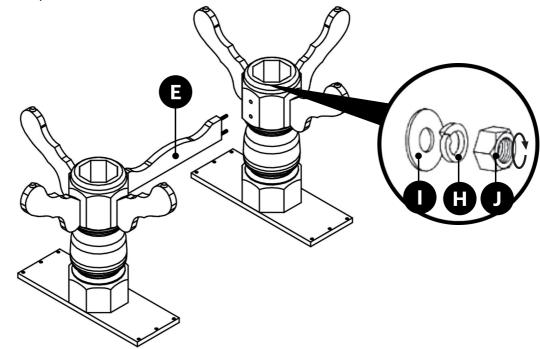







Customer Service
help.furniturechoice.co.uk

**5** Place the table top on a soft, flat surface. Attach the pedestal legs to the table top using the screws as shown, then tighten with a Phillips screwdriver.

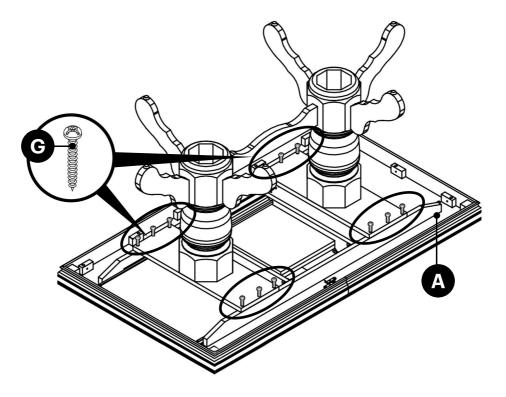

6 Remove the wooden transit blocks with a Phillips screwdriver.

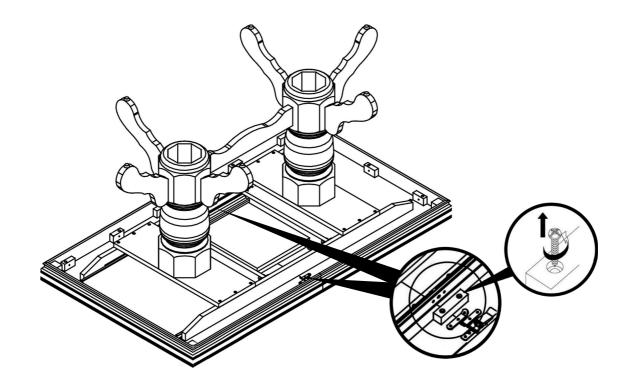






Customer Service
help.furniturechoice.co.uk

**7** Place the table in an upright position.



8 To extend the table, unlock the clasps beneath the table top and pull both sides apart.

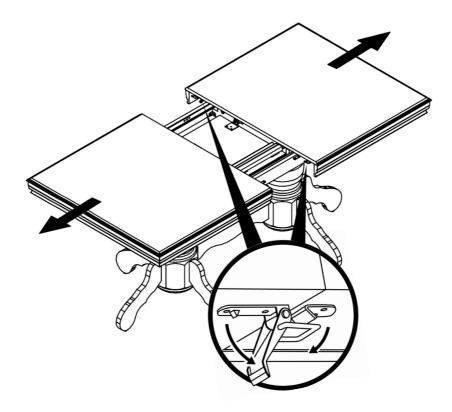







Customer Service help.furniturechoice.co.uk

**9** Pull out the butterfly extension and flip up the table aprons as shown.

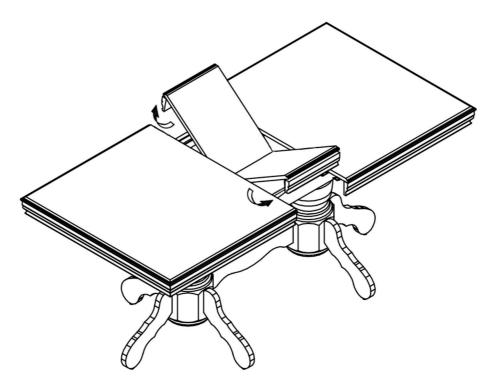

**10** Gently place the butterfly extension in position and push the table top back together.

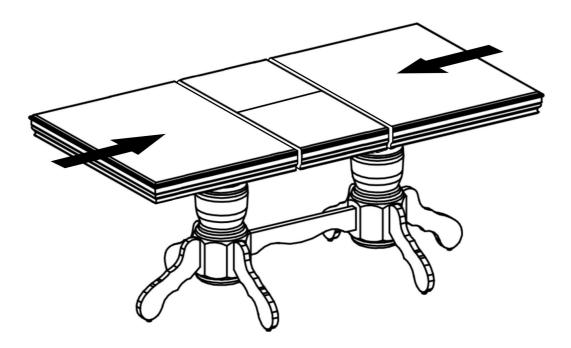







■ 茶た回 Customer Service help.furniturechoice.co.uk

**11** Lock the clasps beneath the table top to secure.

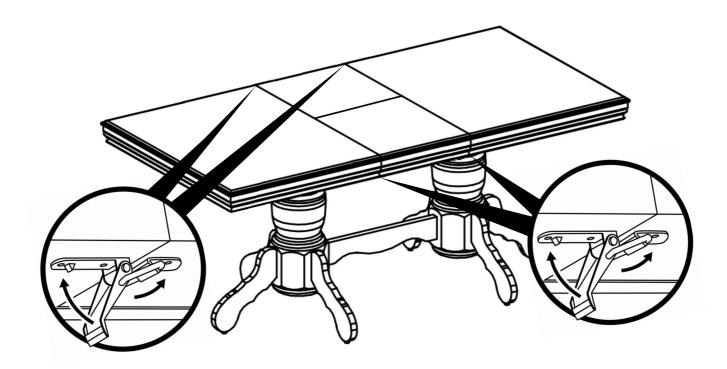

12

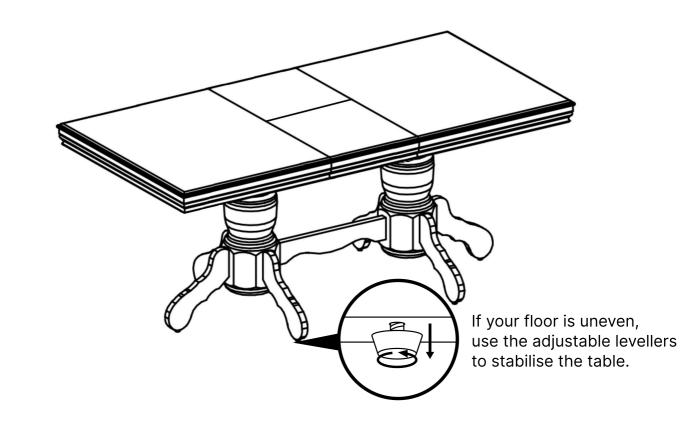





## - Important information - please read before use



## Appearance

- Every effort has been made to ensure each piece of furniture matches
- The materials used may have variation in colour and grain this is a natural characteristic of the material and not a fault

## **Cleaning your furniture**

- Do not use household cleaning products, bleaches, solvent based cleaners, detergents, corrosives, scourers or abrasives, which can damage surfaces
- Wipe clean with a damp cloth and dry with a soft duster making sure no surfaces are left wet

## Caring for your furniture

# To avoid deep scratches or surface damage that can impact the integrity, longevity and durability of your table

- Always use place mats or trivets and do not place hot items directly on the table top
- Lift objects off the table instead of dragging them across the surface
- Do not stick adhesive tape on any surfaces
- Remove spills immediately with a damp cloth and dry with a soft duster making sure no surfaces are left wet
- Cleaning and use over time can change the surface colour slightly
- Avoid strong sunlight (such as through patio doors and windows), as this can cause discolouration, fading or surface degradation over time. This can be especially noticeable when compared to areas that are not exposed, such as centre extensions and under table runners
- Avoid strong sunlight on chrome finishes as this can magnify the heat of the sun
- Avoid excessive heat (such as radiators or open fires) as this can cause warping or cracking

## To avoid structural damage

- Do not put heavy items on the edge of the table top
- Do not stand or sit on the table
- Do not drag the table when moving, instead lift and place carefully
- Do not use the table unless all the bolts and screws are fully tightened
- Regularly tighten the bolts to avoid damage and maintain stability and strength

This table is for indoor, residential use only.

For more information and support, visit help.furniturechoice.co.uk